


Expanded View of Thermocouple Flame Sense (TFS) Fire Pits

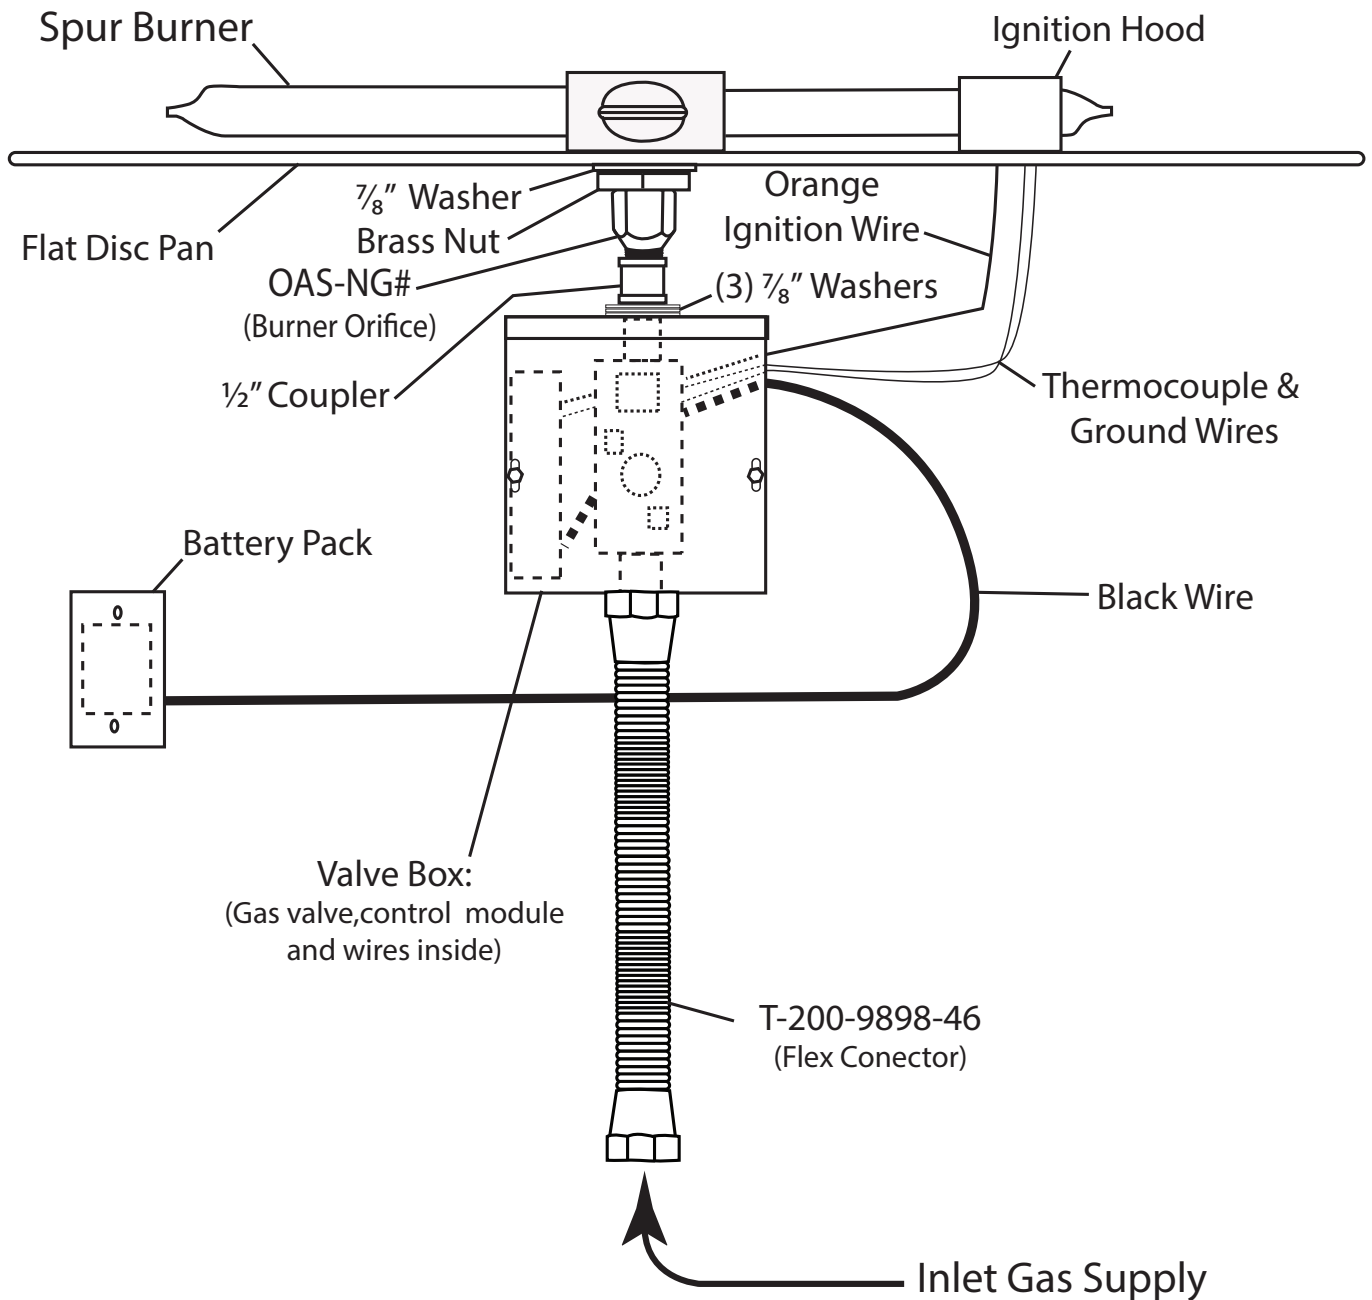

Note: Use joint compound or Teflon tape resistant to all gasses on all male NPT threads; not flared fittings. Ensure all connections are tight and check for gas leaks before and after assembly is complete.